 
 


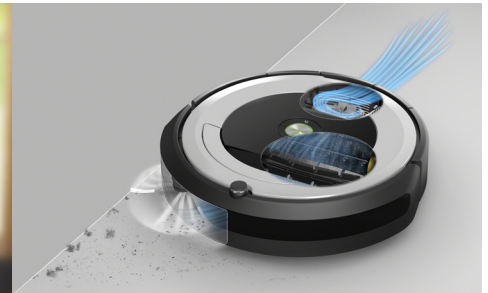

# iRobot®

## Roomba® Vacuuming Robot

The iRobot® Roomba® 600 Series cleans your floors on a schedule with the iRobot HOME App<sup>1</sup> or at the push of the CLEAN button, using a patented 3-Stage Cleaning System to pick up dust, dirt and debris.

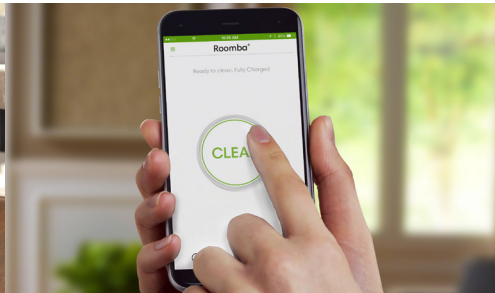

### SMART

iAdapt® Navigation and a full suite of sensors enable Roomba® to seamlessly navigate around obstacles, under furniture, and along wall edges, while avoiding stairs and other drop-offs.

- At just 3.6" (9.2 cm) tall, Roomba has been specifically designed to fit under most furniture and kickboards, so dirt has no place to hide.
- Roomba detects high concentrations of dirt and debris and spends more time cleaning those areas.
- Cliff-detection sensors allow Roomba to avoid stairs and other dangerous drop-offs.

### SIMPLE

Just press CLEAN on the robot or in the iRobot HOME App,<sup>1</sup> or set a schedule that is convenient for you. Select Roomba® models can be preset to vacuum up to seven times per week giving you a clean home every day.

- With just the press of a button, Roomba gets to work with no programming required.
- Roomba automatically adjusts to clean carpets, tile, hardwood and laminate floors as it moves through your home.
- Roomba is always ready to clean because it automatically returns to its Home Base® between cleanings to recharge.
- The iRobot HOME App<sup>1</sup> lets you clean and schedule conveniently, see the status of cleaning jobs no matter where you are, and gives you direct access to customer support.
- Using the iRobot HOME App,<sup>1</sup> Roomba can be preset to vacuum up to seven times per week, meaning your home can stay clean every day.
- With Amazon Alexa or the Google Assistant, you have hands-free control to start, stop, or dock your Roomba® 690 vacuuming robot.<sup>2</sup>

### CLEAN

The patented 3-Stage Cleaning System uses a combination of agitation, brushing, and suction to remove dust, dirt and hair from your floors.

- Brushes loosen embedded debris, while lifting debris away from the floor surface allowing the vacuum to pull the debris into the bin.
- Spinning side brush sweeps along wall edges, by pushing debris into the path of the 3-Stage Cleaning System making Roomba adept at cleaning along wall edges.
- AeroVac™ Filter captures fine dust and debris.

<sup>1</sup>The iRobot HOME App is only available for select Roomba 600 series models with Wi-Fi connectivity.

<sup>2</sup>Compatible with Wi-Fi® connected Roomba® vacuuming robots only.

# iRobot®